


# XCITING 400 i ABS

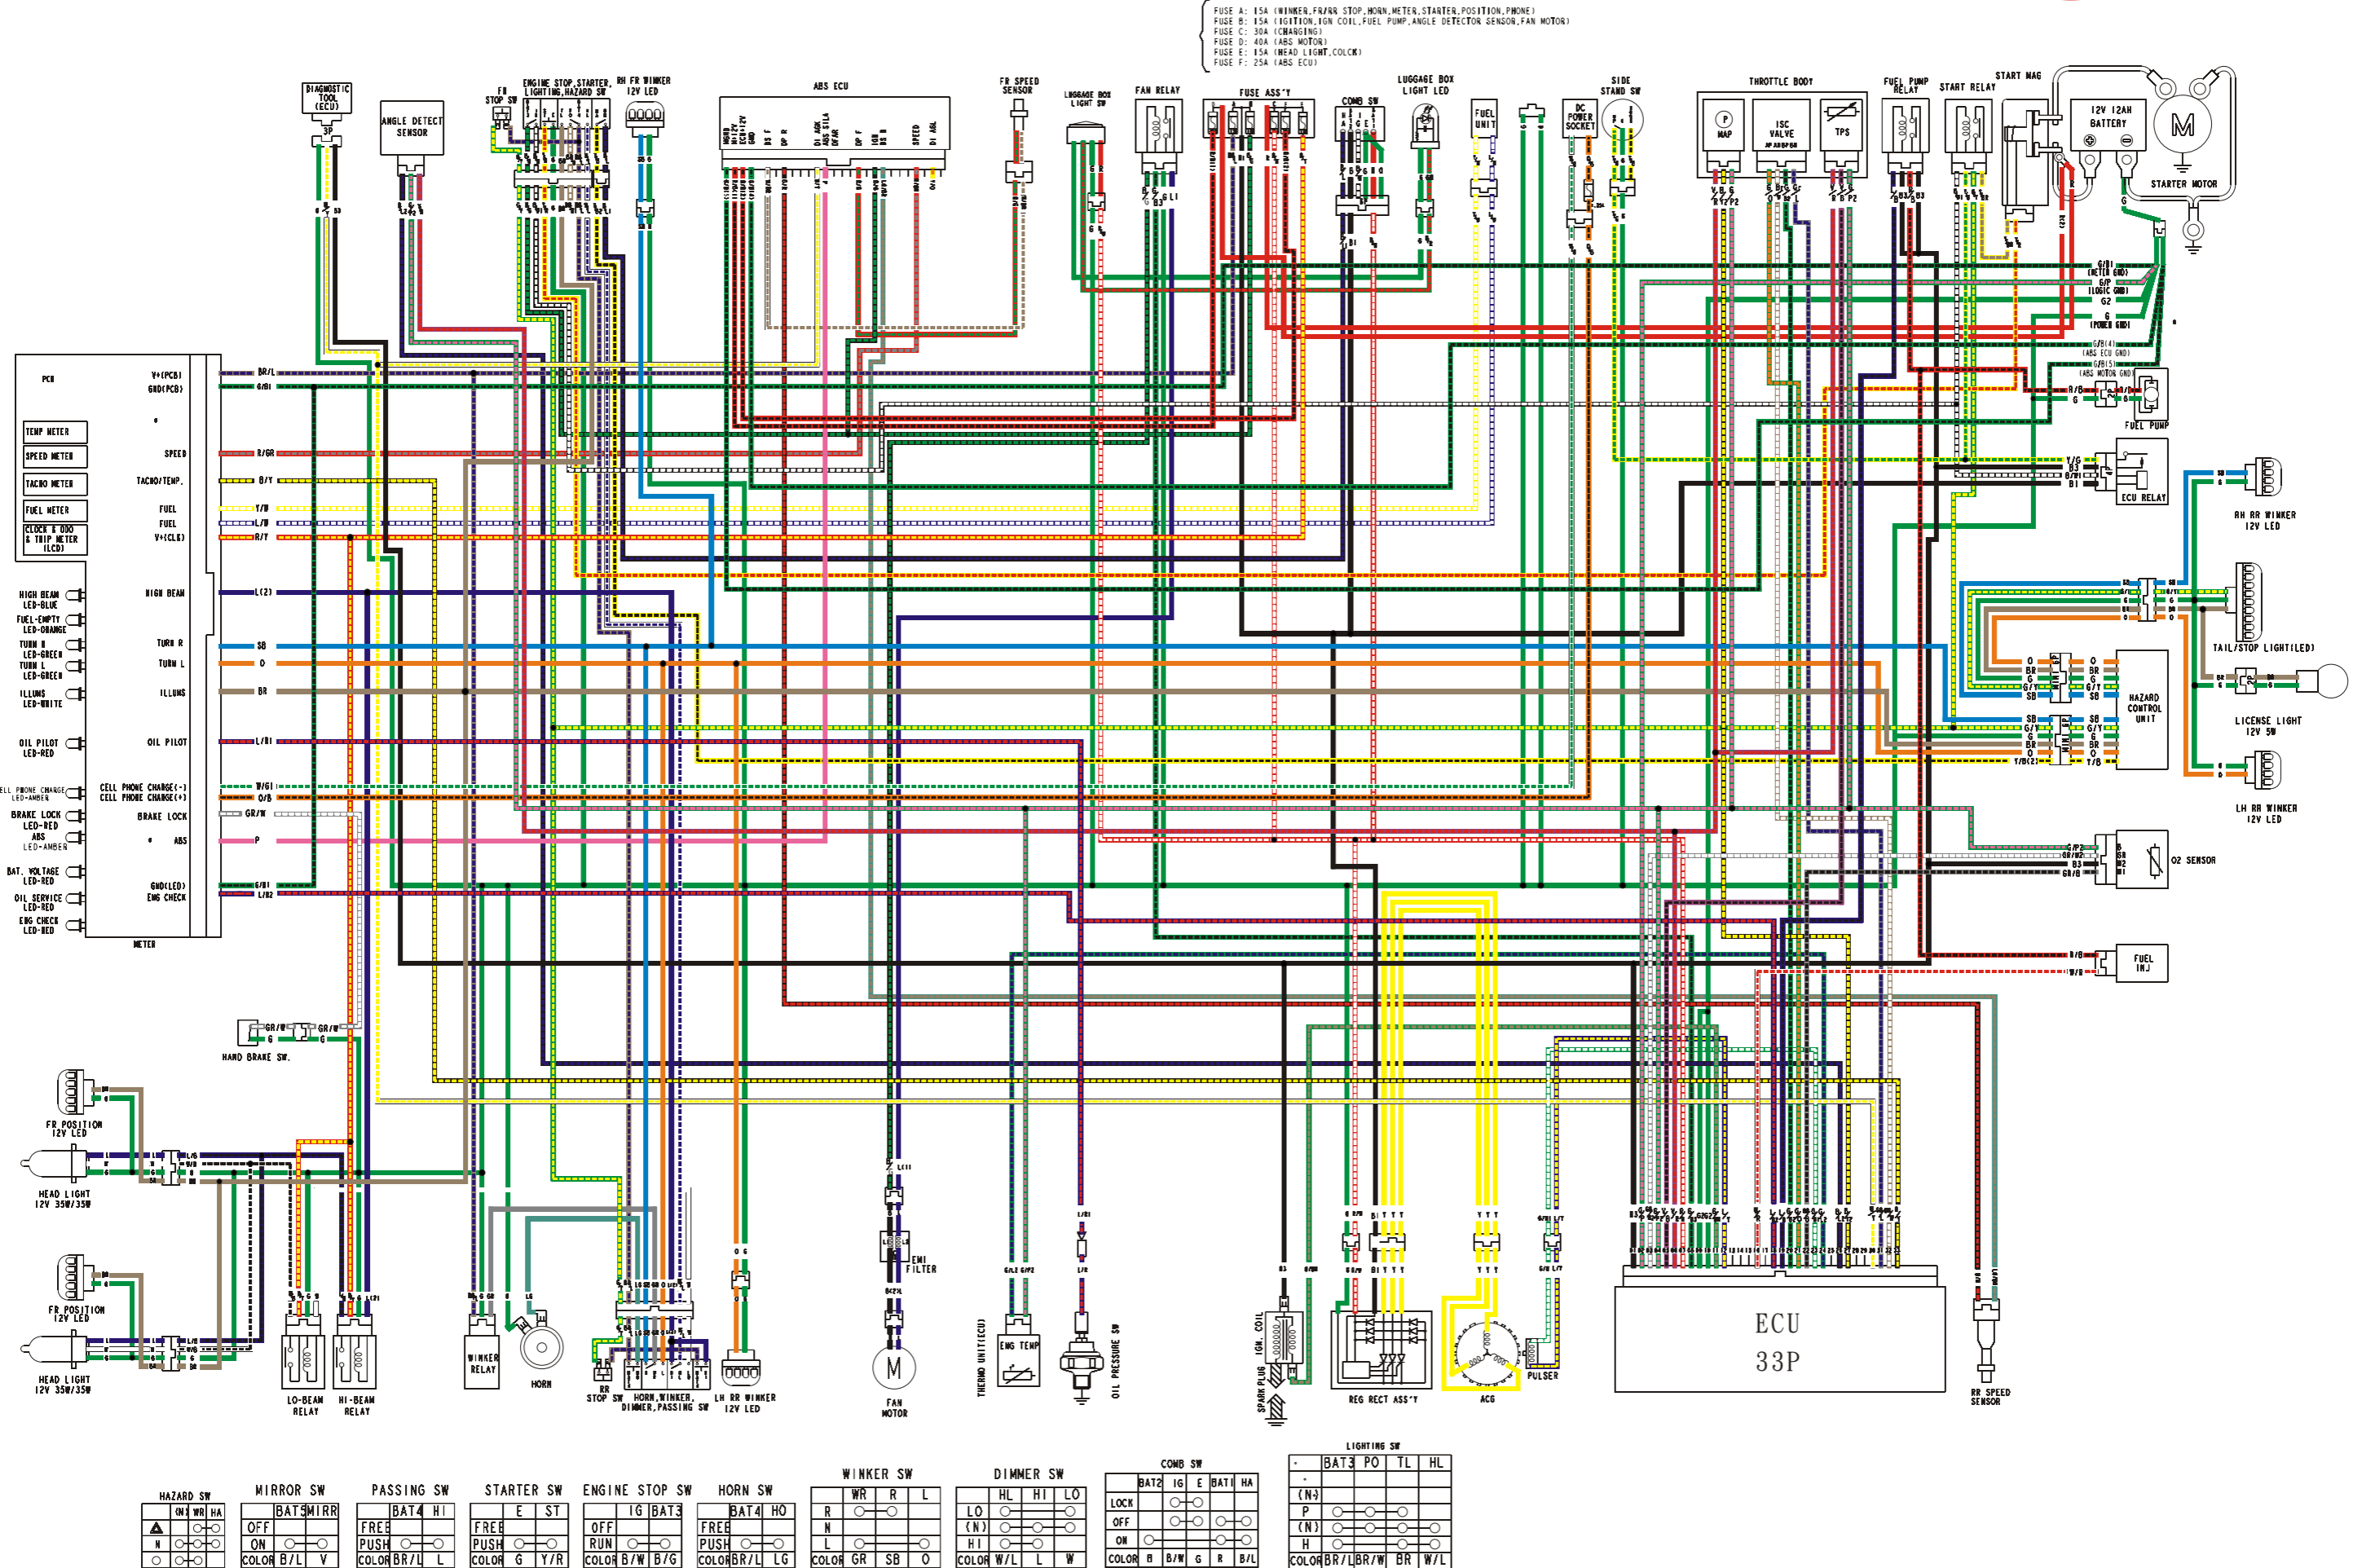

FUSE A: 15A (WINKER, FR/RR STOP, HORN, METER, STARTER, POSITION, PHONE)  
 FUSE B: 15A (IGNITION, IGN COIL, FUEL PUMP, ANGLE DETECTOR SENSOR, FAN MOTOR)  
 FUSE C: 30A (CHARGING)  
 FUSE D: 40A (ABS MOTOR)  
 FUSE E: 15A (HEAD LIGHT, COCK)  
 FUSE F: 25A (ABS ECU)

HAZARD SW		
(ON) W	(ON) R	(ON) HA
(OFF) N	(OFF) N	(OFF) N

MIRROR SW		
OFF	BAT	MIRR
ON	B/L	V

PASSING SW		
FRE	BAT	H I
PUSH	BR/L	L

STARTER SW		
FRE	E	ST
PUSH	G	Y/R

ENGINE STOP SW		
OFF	IG	BAT
RUN	B/W	B/G

HORN SW		
FRE	BAT	HO
PUSH	BR/L	LG

WINKER SW		
R	WR	R L
N		
L		
COLOR	GR	SB O

DIMMER SW		
LO	HL	HI LO
(N)		
HI		
COLOR	W/L	L W

COMB SW		
LOCK	BAT	IG E BAT HA
OFF		
ON		
COLOR	B/B/W	G R B/L

LIGHTING SW		
BAT	PO	TL HL
(N)		
P		
(N)		
H		
COLOR	BR/L	BR W/L